


# **WS-7213U**

## **Wireless 433 MHz**

### **Weather Station**

## **Instruction Manual**

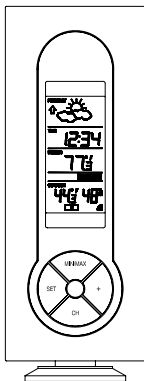

**LA CROSSE**  
**TECHNOLOGY**  
*technology tools for home & office*

# TABLE OF CONTENTS

<b>Topic</b>	<b>Page</b>
Inventory of Contents	3
Additional Equipment	4
Quick Setup	5-8
Detailed Setup Guide	
Battery Installation	9-11
Setting the Time	11
Features	
Minimum and Maximum Temperatures	12-13
Resetting Minimum and Maximum Temperatures	13
Weather Forecast and Weather Tendency Arrows	14-17
Adding additional remote temp/humidity sensors (optional)	17-19
Viewing and operating multiple remote temp/humidity sensors	19-20
Mounting	21-22
Troubleshooting	23-26
Maintenance and Care	26
Specifications	27-28
Warranty Information	29-31

# INVENTORY OF CONTENTS

1. The indoor weather station (Figure 1)
2. The remote temperature/humidity sensor (TX4U) and mounting bracket. (Figure 2)
3. Mounting hardware.
4. Instruction Manual and Warranty Card.

Figure 1


 


Figure 2

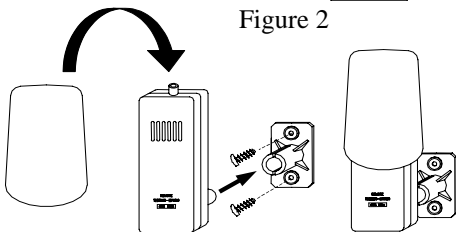

## **ADDITIONAL EQUIPMENT**

(not included)

1. 1 Philips screwdriver.
2. 2 Fresh AA 1.5V batteries.  
(for the indoor weather station)
3. 2 Fresh AA 1.5V batteries.  
(for the temp/humidity sensor)

## QUICK SETUP

**Hint: Use good quality Alkaline Batteries and avoid rechargeable batteries.**

1. Have the indoor weather station and remote temp/humidity sensor 3 to 5 feet apart.
2. Batteries should be out of all units for 10 minutes.
3. Place the batteries into the **remote temp/humidity sensor** first, then into the **indoor weather station**.  
(All remote temp/humidity sensors must be started before the indoor weather station)
4. **DO NOT PRESS ANY BUTTONS FOR 15 MINUTES.**

In this time the indoor weather station and remote temp/humidity sensor will start to talk to each other and the displays will show both the indoor temperature and an outdoor temperature and humidity. If the indoor weather station do not display both the indoor temperature and the outdoor temperature and humidity after the 15 minutes please retry the set up as shown on page five.

After both indoor temperature and outdoor temperature and humidity are displayed for 10 minutes you can place your remote temp/humidity sensor outdoors and set your time.

## **Notes on Outdoor Sensor Placement**

The remote temp/humidity sensor should be placed in a dry, shaded area. Fog and mist will not harm your remote temp/humidity sensor but direct rain must be avoided.

The remote temp/humidity sensor has a range of 80 feet. Any walls that the signal will have to pass through will reduce distance. An outdoor wall or window can have up to 30 feet of resistance and an interior wall can have up to 20 feet of resistance. Your distance plus resistance should not exceed 80 ft. in a straight line.

## **Notes on Weather Station Placement**

The 80 ft distance is between each indoor weather station and the temp/humidity sensor independently. The placement of one indoor weather station does not affect the placement of a second indoor weather station.

To complete the set up of your indoor weather station after the 10 minutes have passed, please follow the steps below.

1. Press and hold the “*SET*” button for five seconds.
2. The hour will now be flashing.
  - a. Press and release the “+” button until the correct hour is shown.

**Note:** There is “PM” displayed to the left of the hour when between noon and midnight. During the AM hours this area will be blank.

- b. When the correct hour is shown, press and release the “*SET*” button once.
3. The minutes will now be flashing.
  - a. Press and release the “+” button until the correct minutes are displayed.


**Press and release the SET button once more and you are done.**



# DETAILED SETUP GUIDE

## I. BATTERY INSTALLATION

### A. REMOTE TEMP/HUMIDITY SENSOR

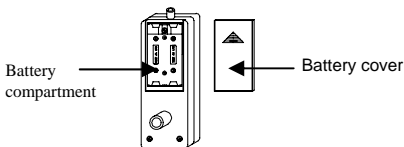


1. Remove the mounting bracket.
2. Remove battery cover
3. Observing the correct polarity, install 2 AA batteries—make sure they do not spring free, or start-up problems may occur.
4. Replace cover.

## B. INDOOR WEATHER STATION

**Note:** After the batteries are installed, **DO NOT** press any buttons for 15 minutes. This may interfere with the signals, causing temperatures to register incorrectly.

1. Remove the battery cover on the backside. To do this, push up and pull out.
2. Observing the correct polarity, install 2 AA batteries.

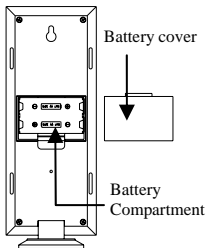

3. Replace battery cover.
4. Wait 15 minutes or until both the indoor and outdoor temperatures are shown on the indoor weather station.

5. The indoor weather station should now show: “-:- -” in the TIME LCD, indoor temperature in the INDOOR LCD and outdoor temperature and humidity in the OUTDOOR LCD.

## II. SETTING THE TIME

1. Press and hold the “*SET*” button for 5 seconds.
2. The hour will begin to flash.
3. Press and release the “+” button to advance the hour to your desired hour.
4. Press and release the “*SET*” button to move to the minute setting.
5. The minutes will begin to flash.
6. Press and release the “+” button to set the minutes.
7. Press and release the “*SET*” button to activate the clock.

**Note:** There is “PM” displayed to the left of the hour when between noon and midnight. During the AM hours this area will be blank.

# FEATURES

## A. MINIMUM AND MAXIMUM TEMPERATURES

1. Press and release the “*MIN/MAX*” button, “*MAX*” appears at the bottom of the display and the recorded maximum temperatures are displayed.



2. Press and release the “*MIN/MAX*” button to toggle to the minimum temperatures, “*MIN*” appears at the bottom of the display and the recorded minimum temperatures are





displayed.

## **B. RESETTING THE MINIMUM AND MAXIMUM TEMPERATURES**

To reset both the minimum and maximum temperatures—press and hold the “*MIN/MAX*” button for 5 seconds.

## C. WEATHER FORECAST


The weather forecasting feature is estimated to be 75% accurate. The weather forecast is based solely upon the change of air pressure over time. The WS-7213U averages past air-pressure readings to provide an accurate forecast—creating a necessity to disregard all weather forecasting for 12-24 hours after the unit has been set-up, reset, or moved from one altitude to another (i.e. from one floor of a building to another floor). In areas where the weather is not affected by the change of air pressure, this feature will be less accurate.

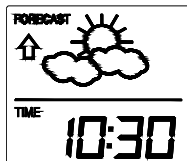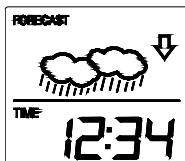


## 1. Weather Icons

There are 3 possible weather icons that will be displayed in the FORECAST LCD:


*Sunny*—indicates that the weather is expected to improve (not that the weather will be sunny).

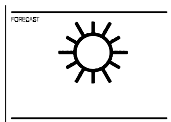

*Sun with Clouds*—indicates that the weather is expected to be fair (not that the weather will be sunny with clouds).

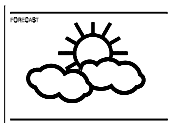

*Clouds with Rain*—indicates that the weather is expected to get worse (not that the weather will be rainy).

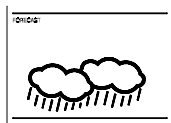

The weather icons change when the unit detects a change in air pressure. The icons change in order, from “sunny” to “partly sunny” to “cloudy” or the reverse. It will not change from “sunny” directly to “rainy”, although it is possible for the change to occur quickly. If the symbols do not change then the weather has not changed, or the change has been slow and gradual.

## 2. Weather Tendency Arrows

Other possible displays in the FORECAST LCD are 2 weather tendency arrows, one that points up (on the left side of the LCD) and one that points down (on the right side of the LCD). These arrows reflect current changes in the air pressure. An arrow pointing up indicates that the air pressure is increasing and the weather is expected to improve or remain good. An arrow



pointing down indicates that the air pressure is decreasing and the weather is expected to become worse or remain poor. No arrow means the pressure is stable and the weather should remain relatively the same

## **D. ADDING ADDITIONAL REMOTE TEMP/HUMIDITY SENSORS (OPTIONAL)**

The WS-7213U is able to receive signals from 3 different remote temperature, temperature/humidity sensors. Following are some brief instructions for the basic set-up of remote sensor units with the WS-7213U. These extra sensors can be purchased through the same dealer as this unit, or by contacting La Crosse Technology directly. A TX6 will monitor temperature only, a TX3U will monitor temperature and display the temperature on its LCD, the TX3UP will

monitor the temperature via a probe for use in pools, spas, etc and the TX4U will monitor temperature and humidity.

**Note:** When setting up multiple units it is important to remove the batteries from all existing units in operation, then to insert batteries first into all the remote sensor units, and in numeric sequence. Second, install batteries into the indoor weather station. Transmission problems will arise if this is not done correctly and if the total time for set-up exceeds 6 minutes.

1. It is necessary to remove the batteries from all units currently in operation.
2. Remove the battery covers to all remote sensor units.
3. Place all remote sensor units in a numeric sequential order.
4. In sequential order, install batteries (follow the same battery installation



procedures seen in section “I” of the Detailed Set-Up Guide) into the remote sensors.

5. Install batteries into the indoor weather station.

Follow the Detailed Set-Up Guide for programming and operating instructions.

## **E. VIEWING AND OPERATING WITH MULTIPLE REMOTE SENSOR UNITS**

1. To view the temperature of a different remote sensor unit, press and release the “CH” button. A shift from one “boxed” number to the next should be observed in the OUTDOOR LCD.

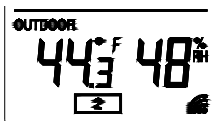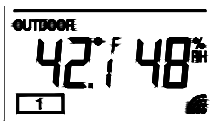

2. To view the Minimum/Maximum temperature: first select from which remote temp/humidity sensor to read data from (indicated by the “boxed” number). Pressing and releasing the “*MIN/MAX*” button will toggle through the minimum and maximum indoor temperature, and the minimum and maximum outdoor temperature.
3. To reset the Minimum/Maximum readings, press and hold the “*MIN/MAX*” button for five seconds.

## **MOUNTING**

**Note:** To achieve a true temperature reading, avoid mounting in direct sunlight. We recommend that you mount the remote temp/humidity sensor on an outside North-facing wall. The sending range is 80ft; obstacles such as walls, concrete, and large metal objects will reduce the range. Place both units in their desired location temporarily to test reception capability before permanently mounting.

### **A. REMOTE TEMP/HUMIDITY SENSOR**

1. Remove the mounting bracket from the remote temp/humidity sensor
2. Mount using either screws or adhesive tape.
3. Reattach the remote temp/humidity sensor to the mounting bracket.

## **B. THE WEATHER STATION**

1. The indoor weather station comes with the table stand already mounted. If you wish to use the table-stand, all that is required is to place the indoor weather station in your desired location.
2. To wall mount:
  - a) Remove the table stand by pulling down on the stand from the rear and rotating forward.
  - b) Fix a screw (not included) into the desired wall.
  - c) Place the indoor weather station onto the screw using the hanging hole on the backside.
  - d) Gently pull the indoor weather station down to lock the indoor weather station into place.

## **TROUBLESHOOTING**

**NOTE:** *For problems not solved, please contact La Crosse Technology via e-mail or phone, or visit our website, [www.lacrossetechnology.com](http://www.lacrossetechnology.com)*

**Problem:** The LCD is faint

**Solution:** Replace batteries

**Problem:** No outdoor temperature or humidity is displayed.

**Solution:**

- 1) First try to re-establish communication between the remote sensor and indoor weather station by moving both units to within three to five feet of each other. Wait about ten minutes and then check for a temperature and humidity.
- 2) If this does not work please remove the batteries from both units and restart the system (please see Detailed Set-up on page nine through eleven).

**Note:** Please make sure when restarting the system that all batteries are fresh.

- 3) Once the system has been reset and you have a temperature and humidity reading from the sensor, temporarily place the remote temp/humidity sensor in the previous location.

**Note:** If there is a outdoor temperature and humidity displayed when the two units are close together there was either too much distance between the two units previously or some type of interference that was causing poor reception.

- 4) If after 15 minutes the temperature and humidity are not displayed you will need to choose another location for placement of the temp/humidity sensor.
- 5) The best way of doing this is to move the sensor 10 feet closer to the indoor weather station.
- 6) After moving the remote temp/humidity sensor please wait 15 minutes to give the indoor weather station time to re-acquire the signal.



**Problem:** Temperatures do not match if units are placed next to each other.

**Solution:** Each temp/humidity sensor is manufactured to be accurate to within 2 degree plus or minus and under normal conditions. It is possible for two temp/humidity sensors to be as much as 4 degrees different. The difference can be exaggerated further because the temp/humidity sensors are designed for different working environments. The indoor sensor is less responsive to ambient air currents because of the shielding effect of the indoor weather station's case. In addition, the casing can act as a heat sink to absorb and store heat from external sources (i.e. handling of the case or radiant heat). In addition, the much greater range of the outdoor temp/humidity sensor requires a different calibration curve than the indoor range. Error is usually greater at the extreme ends of a range, making it harder to compare different ranges with different curves. Under non-laboratory conditions, it is difficult to

compensate for the above factors and obtain an accurate comparison.

## **MAINTENANCE AND CARE INSTRUCTIONS**

- Extreme temperatures, vibration, and shock should be avoided to prevent damage to the units.
- Clean displays and units with a soft, damp cloth. Do not use solvents or scouring agents; they may mark the displays and casings.
- Do not submerge in water.
- Do not subject the units to unnecessary heat or cold by placing them in the oven or freezer.
- Opening the casings invalidates the warranty. Do not try to repair the unit. Contact La Crosse Technology for repairs.

## SPECIFICATIONS

Transmitting Frequency	433MHz
<b>Measuring Range - Temperature</b>	
Indoor Weather Station: Indoor	32°F to 140°F with 0.1°F resolution.
Indoor Weather Station: Outdoor	-21.8 °F to 139.8°F with 0.1°F resolution.
Temp accuracy	+/- 1°F
<b>Measuring Range – Humidity</b>	
Indoor Weather Station:	20% to 95% with 1% resolution (“—“ displayed when outside this range)
<b>Temperature Checking Interval</b>	
Indoor:	Every 10 seconds
Outdoor:	Three times in 10 minutes
<b>Humidity Checking Interval</b>	
Outdoor:	Three times in 10 minutes

Transmitting range:	Maximum 80 feet (25m) open space
<b>Batteries—(Alkaline recommended)</b>	
Remote Temp/Humidity Sensor	2 x AA, 1.5V
Indoor Weather Station	2 x AA, 1.5V
<b>Dimensions: (H x W x D)</b>	
Indoor Weather Station	7.5" x 3" x 1.12" (excluding table stand) (190 x 76 x 28 mm)
Remote Temp/Humidity Sensor	4.33" x 1.57" x 0.78" (110 x 40 x 20 mm) Rain Protector 2.25"Ø x 4.75" high (57 mmØ x 120 mm high)
Battery life	Approximately 1 year

## WARRANTY INFORMATION

La Crosse Technology, Ltd provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased and used in North America and only to the original purchaser of this product. To receive warranty service, the purchaser must contact La Crosse Technology, Ltd for problem determination and service procedures. Warranty service can only be performed by a La Crosse Technology, Ltd authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to La Crosse Technology, Ltd or La Crosse Technology, Ltd's authorized service center.

La Crosse Technology, Ltd will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of La Crosse Technology, Ltd and must be returned to La Crosse Technology, Ltd. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer. La Crosse Technology, Ltd will pay all expenses for labor and materials for all repairs covered by this warranty. If necessary repairs are not covered by this warranty, or if a product is examined which is not in need or repair, you will be charged for the repairs or examination. The owner must pay any shipping charges incurred in getting your La Crosse

Technology, Ltd product to a La Crosse Technology, Ltd authorized service center. La Crosse Technology, Ltd will pay ground return shipping charges to the owner of the product to a USA address only.

Your La Crosse Technology, Ltd warranty covers all defects in material and workmanship with the following specified exceptions: (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs or alterations by someone other than an authorized La Crosse Technology, Ltd authorized service center; (6) units used for other than home use (7) applications and uses that this product was not intended or (8) the products inability to receive a signal due to any source of interference.. This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.

LA CROSSE TECHNOLOGY, LTD WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT. THIS PRODUCT IS NOT TO BE USED FOR MEDICAL PURPOSES OR FOR PUBLIC INFORMATION. THIS PRODUCT IS NOT A TOY. KEEP OUT OF CHILDREN'S REACH.

This warranty gives you specific legal rights. You may also have other rights specific to your State. Some States do not allow the exclusion of consequential or incidental damages therefore the above exclusion of limitation may not apply to you.

For warranty work, technical support, or information contact:

La Crosse Technology  
2809 Losey Blvd. S.  
La Crosse, WI 54601  
Phone: 608.782.1610  
Fax: 608.796.1020

e-mail:

[support@lacrossetechnology.com](mailto:support@lacrossetechnology.com)  
(warranty work)

[sales@lacrossetechnology.com](mailto:sales@lacrossetechnology.com)  
(information on other products)

web:

[www.lacrossetechnology.com](http://www.lacrossetechnology.com)

## **FCC DISCLAIMER**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Freq. 433.92 MHz

La Crosse Technology

Made in China

WS-7213U

**FCC ID: OMO-01RX (Receiver)**

**OMO-01TX (Sensor)**

080503 All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher.

**This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences.**

**All trademarks and patents are acknowledged.**

 


# WS-7034U

## Wireless 433 MHz

### Temperature Station

## Instruction Manual



## TABLE OF CONTENTS

<b>Topic</b>	<b>Page</b>
Inventory of Contents	1
Quick Setup	2
Detailed Setup Guide	
Battery Installation	3-4
Setting the Time	5
Selecting Units of Measurement	6
Features	
Minimum and Maximum Temperatures	6-7
Resetting Minimum and Maximum Temperatures	7
Additional remote control senders (optional)	7-10
Mounting	10-11
Troubleshooting	12-14
Maintenance and Care	14-15
Specifications	15-16
Warranty Information	17-19

## INVENTORY OF CONTENTS

1. The Indoor Temperature Station (Figure 1)
2. The Remote Control Sensor (TX2U) and mounting bracket. (Figure 2)
3. 3 each, 1/2" Philips screws.
4. One strip of double sided adhesive tape.
5. Instruction Manual and Warranty Card.

Figure 1

 


Figure 2



## ADDITIONAL EQUIPMENT

(not included)

1. 1 Philips screwdriver.
2. 2 Fresh AAA 1.5V batteries.
3. 2 Fresh AAA 1.5V batteries.

## QUICK SETUP

1. Insert two AAA batteries into the Remote Control Sender.
  2. Insert two AAA batteries into the Indoor Temperature Station.
  3. Wait 5-6 minutes, or until the outdoor temperature is displayed in the OUTDOOR LCD of the Temperature Station.
  4. Set the Time
  5. Mount units.
- (See complete instructions for details).

**Note:** The Remote Control Sender transmits a signal every 3 minutes. After the batteries have been installed, the Indoor Temperature Station searches for these signals for a duration of 6 minutes. If there is no temperature reading in the OUTDOOR LCD after 6 minutes, make sure the units are within range of each other, or repeat battery installation process.

# DETAILED SETUP GUIDE

## I. BATTERY INSTALLATION

### A. REMOTE CONTROL SENDER



Battery cover



Battery compartment

1. Remove the mounting bracket.
2. Remove battery cover
3. Observing the correct polarity, install 2 AAA batteries—make sure they do not spring free, or start-up problems may occur. Replace cover.

### B. TEMPERATURE STATION

**Note:** After the batteries are installed, **DO NOT** press any buttons. This may interfere with the signals, causing temperatures to register incorrectly.

 

1. Remove the battery cover on the backside. To do this, push up and pull out.

2. Observing the correct polarity, install 2 AA batteries.

3. Replace battery cover.

4. Wait 5-6 minutes or until both indoor and outdoor temperatures are shown on the Indoor Temperature Station.


5. The Temperature Station should now show: “-:- -” in the TIME LCD, and temperatures in the INDOOR and OUTDOOR LCD’s.

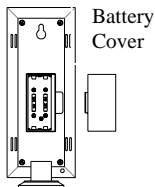

## II. TIME

### A. SETTING THE TIME

1. Press and hold the *SET* button for 1 second. “12h” will appear in the TIME LCD.

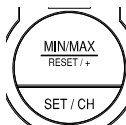

2. Use the *MIN/MAX* button to select either 12h time (am/pm) or 24h time
3. Press the *SET* button 2 times, the hour will flash in the upper left corner.
4. Press the *MIN/MAX* button to set the hours, press the *SET* button, and press the *MIN/MAX* button to set the minutes.
5. Press the *SET* button to activate the clock.

**Note:** When in 12h mode, there is only a “PM” display, which appears under “TIME.” If there is no display here it is AM. Make sure you set the time accordingly.

### **III. UNITS OF TEMPERATURE MEASURE**

#### **A. SELECTING UNITS OF MEASUREMENT**

1. Press and hold the *SET* button for 1 second.
2. Press the *SET* button again. “°F” will appear in the TIME LCD.
3. Press the *MIN/MAX* button to shift between °F and °C.
4. Press the *SET* button twice to activate settings.

### **IV. FEATURES**

#### **A. MINIMUM AND MAXIMUM TEMPERATURES**

1. Press the *MIN/MAX* button. “MIN” appears in the INDOOR LCD and the recorded minimum temperature is displayed.
2. Press the *MIN/MAX* button to toggle to the maximum indoor temperature,



minimum outdoor temperature, and maximum outdoor temperature. The time of occurrence of the value for outdoor temperature will also flash.

## **B. RESETTING THE MINIMUM AND MAXIMUM TEMPERATURES**

1. To reset both the minimum and maximum temperatures—press and hold the *RESET*/+ button for 4 seconds.

## **C. ADDING ADDITIONAL REMOTE CONTROL SENDERS (OPTIONAL)**

1. The WS-7034U is able to receive signals from 3 different Remote Control Senders. Following are some brief instructions for the basic set-up of Remote Control Sender units with the WS-7034U. These extra sensors can be purchased through the same dealer as this unit, or by contacting La Crosse Technology directly. A

TX2U will monitor temperature only, a TX3U will monitor temperature and display the temperature on its LCD, and the TX3UP will monitor the temperature via a probe for use in pools, spas, etc.

2. ***Note: When setting up multiple units it is important to remove the batteries from all existing units in operation, then to insert batteries first into all the Remote Control Sender units, and in numeric sequence. Second install batteries into the Indoor Temperature Station. Transmission problems will arise if this is not done correctly and if the total time for set-up exceeds 6 minutes.***
3. It is necessary to remove the batteries from all units currently in operation.
4. Remove the battery covers to all Remote Control Sender units.
5. Place all Remote Control Sender units in a numeric sequential order.

6. In sequential order, install batteries (follow the same battery installation procedures seen in section I. A) of the Detailed Set-Up Guide).
7. Install batteries into the Indoor Temperature Station.
8. Follow the Detailed Set-Up Guide for programming and operating instructions.

#### **D. VIEWING AND OPERATING WITH MULTIPLE REMOTE CONTROL SENDER UNITS**

1. To view the temperature of a different Remote Control Sender unit, press the *CH* button. A shift from one “boxed” number to the next should be observed in the OUTDOOR LCD.
2. To view the Minimum/Maximum temperature: first select which Remote Control Sender to read data from (indicated by the “boxed” number). Pressing the *MIN/MAX* button will toggle through the minimum and

maximum indoor temperature, and the minimum and maximum outdoor temperature.

3. To reset the Minimum/Maximum readings press and the *MIN/MAX* button for four seconds.

## **V. MOUNTING**

**A. Note:** To achieve a true temperature reading, avoid mounting in direct sunlight. We recommend that you mount the Sender on an outside North-facing wall. The sending range is 80ft; obstacles such as walls, concrete, and large metal objects will reduce the range. Place both units in their desired location before permanently mounting.

### **B. REMOTE CONTROL SENDER**

1. Remove the mounting bracket from the Remote Control Sender and mount with either screws or adhesive tape.

### **C. THE TEMPERATURE STATION**

1. The Indoor Temperature Station comes with the table stand already mounted. If you wish to use the table-stand all that is required is to place the Indoor Temperature Station in an appropriate location.
2. To wall mount, remove the table stand. To do this, pull down on the stand from the rear and rotate forward.
  - a) Fix a screw (not included) into the desired wall, and place the Temperature Station onto the screw using the hanging hole on the backside. Gently pull the Station down to lock the screw into place.

## **TROUBLESHOOTING**

***NOTE:** For problems not solved, please contact La Crosse Technology via e-mail or phone, or visit our website, [www.lacrossetechnology.com](http://www.lacrossetechnology.com)*

**Problem:** The LCD is faint

**Solution:**

- 1) Set the LCD contrast to a higher number
- 2) Replace batteries

**Problem:** No outdoor temperature is displayed.

**Solution:**

- 1) Remove all batteries, reinsert into sender first, then display.
- 2) Place remote sender closer to display.
- 3) Be sure all batteries are fresh.
- 4) Place Remote Control Sender and Weather Station in position so the straight-line signal is not passing through more than two or three walls.

**Problem:** Temperatures do not match if units are placed next to each other.

**Solution:** Each temperature sensor is manufactured to be accurate to within 1 degree plus or minus and under normal conditions, so two sensors could be as much as 2 degrees different. However, the difference can be exaggerated further because the sensors are designed for different working environments. The indoor

sensor is less responsive to ambient air currents because of the shielding effect of the display's case. In addition, the case can act as a heat sink to absorb and store heat from external sources (i.e. handling of the case or radiant heat). Also, the much greater range of the outdoor temperature sensor requires a different calibration curve than the indoor range. Error is usually greater at the extreme ends of a range, making it harder to compare different ranges with different curves. Under non-laboratory conditions, it is difficult to compensate for the above factors and obtain an accurate comparison.

## **MAINTENANCE AND CARE INSTRUCTIONS**

- Extreme temperatures, vibration, and shock should be avoided to prevent damage to the units.
- Clean displays and units with a soft, damp cloth. Do not use solvents or

scouring agents; they may mark the displays and casings.

- Do not submerge in water.
- Do not subject the units to unnecessary heat or cold by placing them in the oven or freezer.
- Opening the casings invalidates the warranty. Do not try to repair the unit. Contact La Crosse Technology repairs.

## SPECIFICATIONS

Transmitting Frequency	433MHz
<b>Measuring Temperatures</b>	
Temperature Station: Indoor	32°F to 156.2°F with 0.2 °F resolution. (0°C to 69.0°C with 0.1°C resolution).
Temperature Station: Outdoor	-21.8 °F to 156.2°F with 0.2°F resolution. (-29.9°C to 69.0°C with 0.1°C resolution).
Temp accuracy	+/- 1°F (+/- .5°C).



Transmitting range	Maximum 80 feet (25m) open space.
<b>Temperature check</b>	
Indoor	Every 10 seconds.
Outdoor	Three times in 10 minutes.
<b>Batteries—(Alkaline recommended)</b>	
Remote Sender	2 x AAA, 1.5V
Temperature	2 x AA, 1.5V
<b>Dimensions: (L x W x H)</b>	
Temperature Station	2.36 x .88 x 5.90 in. (excluding table stand) (60 x 22.5 x 150 mm).
Remote Control Sender	2.32 x 0.86 x 2.55 in. (59 x 22 x 65 mm).
Battery life	Approximately 1 year.

## **WARRANTY INFORMATION**

La Crosse Technology, Ltd provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased and used in North America and only to the original purchaser of this product. To receive warranty

service, the purchaser must contact La Crosse Technology, Ltd for problem determination and service procedures. Warranty service can only be performed by a La Crosse Technology, Ltd authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to La Crosse Technology, Ltd or La Crosse Technology, Ltd's authorized service center.

La Crosse Technology, Ltd will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of La Crosse Technology, Ltd and must be returned to La Crosse Technology, Ltd. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer. La Crosse Technology, Ltd will pay all expenses for labor and materials for all repairs covered by this warranty. If necessary repairs are not covered by this warranty, or if a product is examined which is not in need of repair, you will be charged for the repairs or examination. The owner must pay any shipping charges incurred in getting your La Crosse Technology, Ltd product to a La Crosse Technology, Ltd authorized service center. La Crosse Technology, Ltd will pay ground return shipping charges to the owner of the product to a USA address only.

Your La Crosse Technology, Ltd warranty covers all defects in material and workmanship with the following specified exceptions: (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs or alterations by someone other than an authorized La Crosse Technology, Ltd authorized service center; (6) units used for other than home use (7) applications and uses that this product was not intended or (8) the products inability to receive a signal due to any source of interference.. This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.

LA CROSSE TECHNOLOGY, LTD WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT. THIS PRODUCT IS NOT TO BE USED FOR MEDICAL PURPOSES OR FOR PUBLIC

INFORMATION. THIS PRODUCT IS NOT A TOY.  
KEEP OUT OF CHILDREN'S REACH.

This warranty gives you specific legal rights. You may also have other rights specific to your State. Some States do not allow the exclusion of consequential or incidental damages therefore the above exclusion of limitation may not apply to you.

For warranty work, technical support, or information contact:

La Crosse Technology  
2809 Losey Blvd. S.  
La Crosse, WI 54601  
Phone: 608.782.1610  
Fax: 608.796.1020

e-mail:

[support@lacrossetechnology.com](mailto:support@lacrossetechnology.com)  
(warranty work)

[sales@lacrossetechnology.com](mailto:sales@lacrossetechnology.com)  
(information on other products)

web:

[www.lacrossetechnology.com](http://www.lacrossetechnology.com)

## **FCC DISCLAIMER**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Freq. 433.92 MHz  
La Crosse Technology  
Made in China  
WS-7034U

FCC ID: OMO-01RX (Receiver)  
OMO-01TX (sensor)